

TINY485

RS232 TO RS485 CONVERTER

*Set RTS active when transmit,
otherwise make it inactive.*




Ph 0800 27 28 28

info@ansutek.co.nz

www.ansutek.co.nz

www.ansutekbiz.co.nz

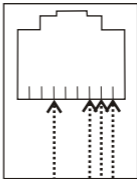

PIN 6, +9V~12V
100mA

Power
Supply

PIN 3, GND

PIN 1, D-

PIN 2, D+

Wiring Diagram

Rear View